



HX-112A
Installation instructions

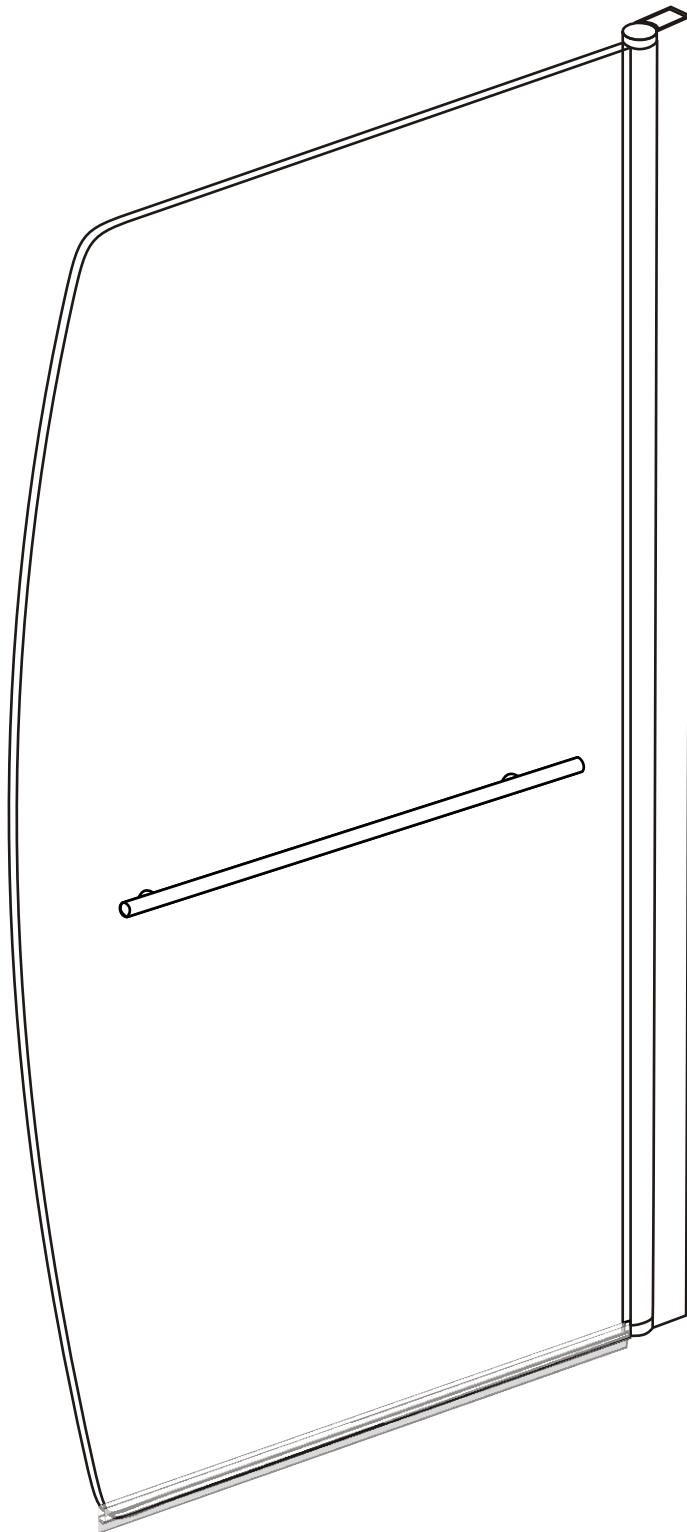

SIZE: 90*140 CM

HX-112A

Installation instructions

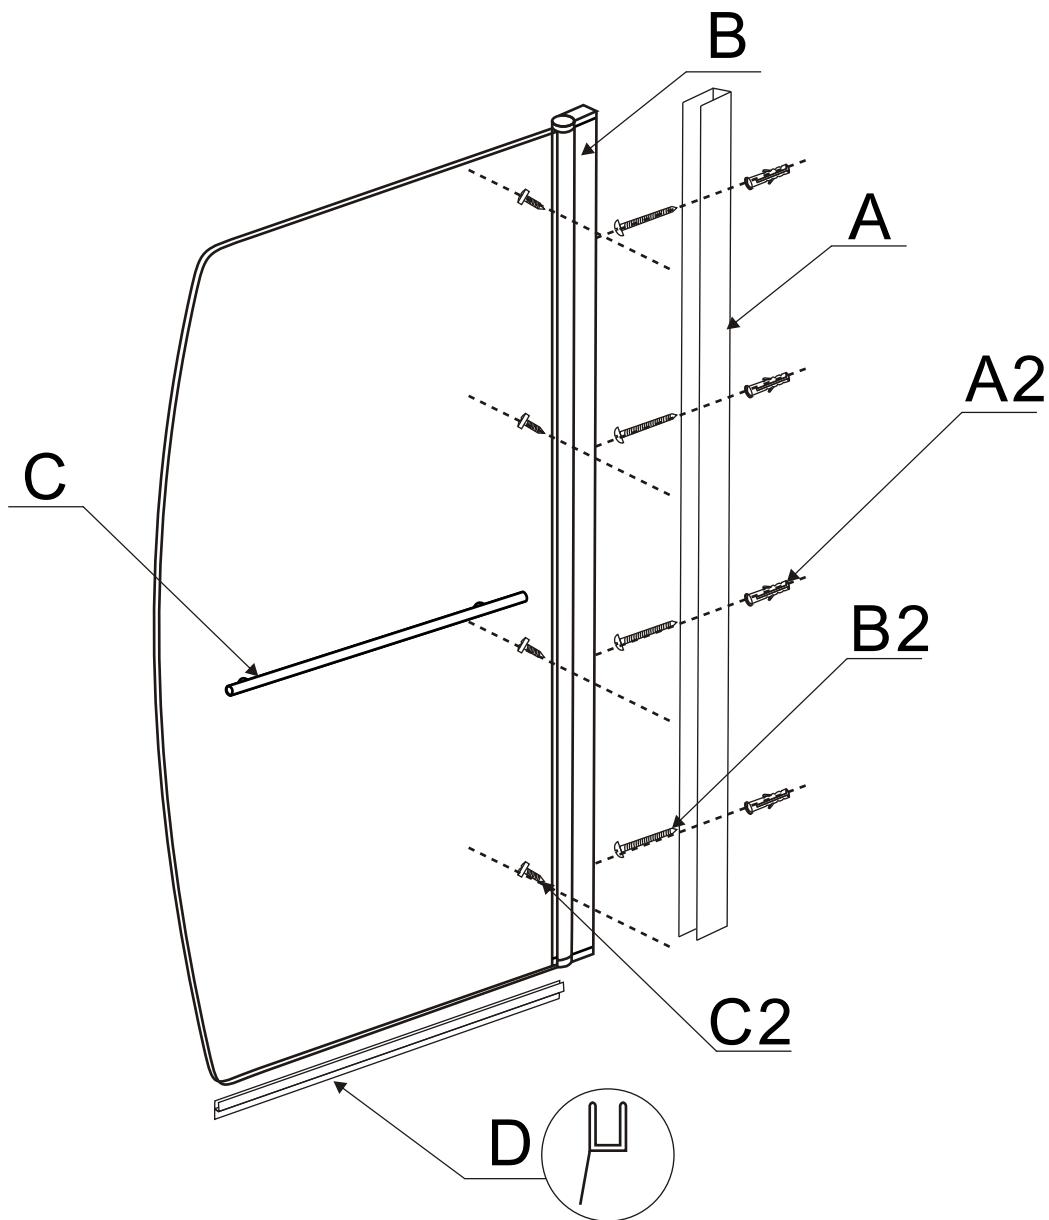

Fixing kit includes

Ref	Description	Qty
A	WALL PROFILE	1
B	SIDE PANEL	1
C	HANDLE	1
D	VERTICAL SEAL FOR FIXED GLASS	1

Ref	Description	Illustration	Qty
A2	green expandable wall plug		4
B2	stainless steel screws: 4*25		4
C2	stainless steel screws: 4*10		4
D2	Drill beat head 3mm		1


HX-112A

Installation instructions


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start, make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: although these instructions are comprehensive, we always recommend that a technically competent installer should undertake installation.

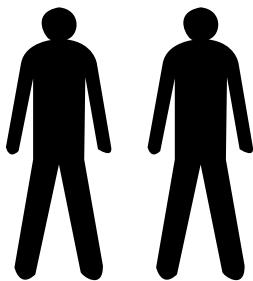


Drill beat head
6mm

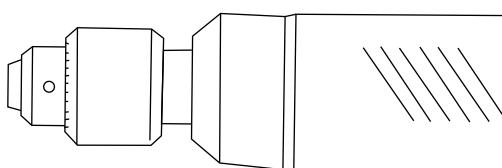


Sanitary Silicone

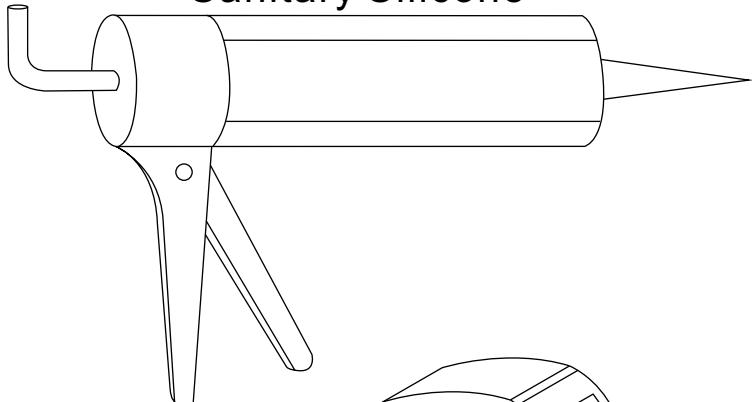


Auger

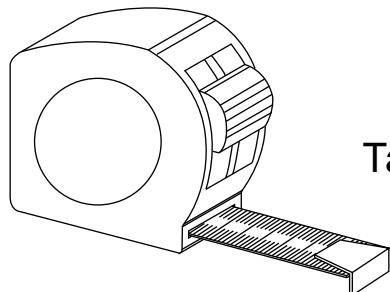


Tape measure



Pencil




Magnetic crosshead screwdriver

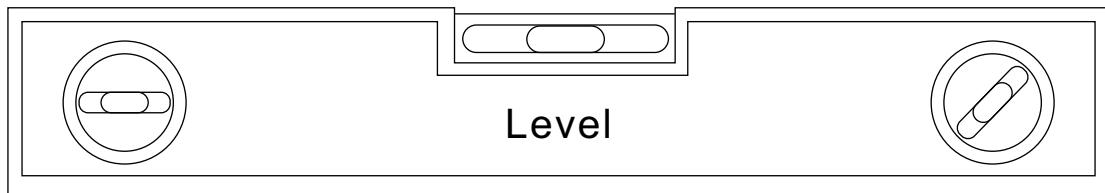

Level


HX-112A

Installation instructions

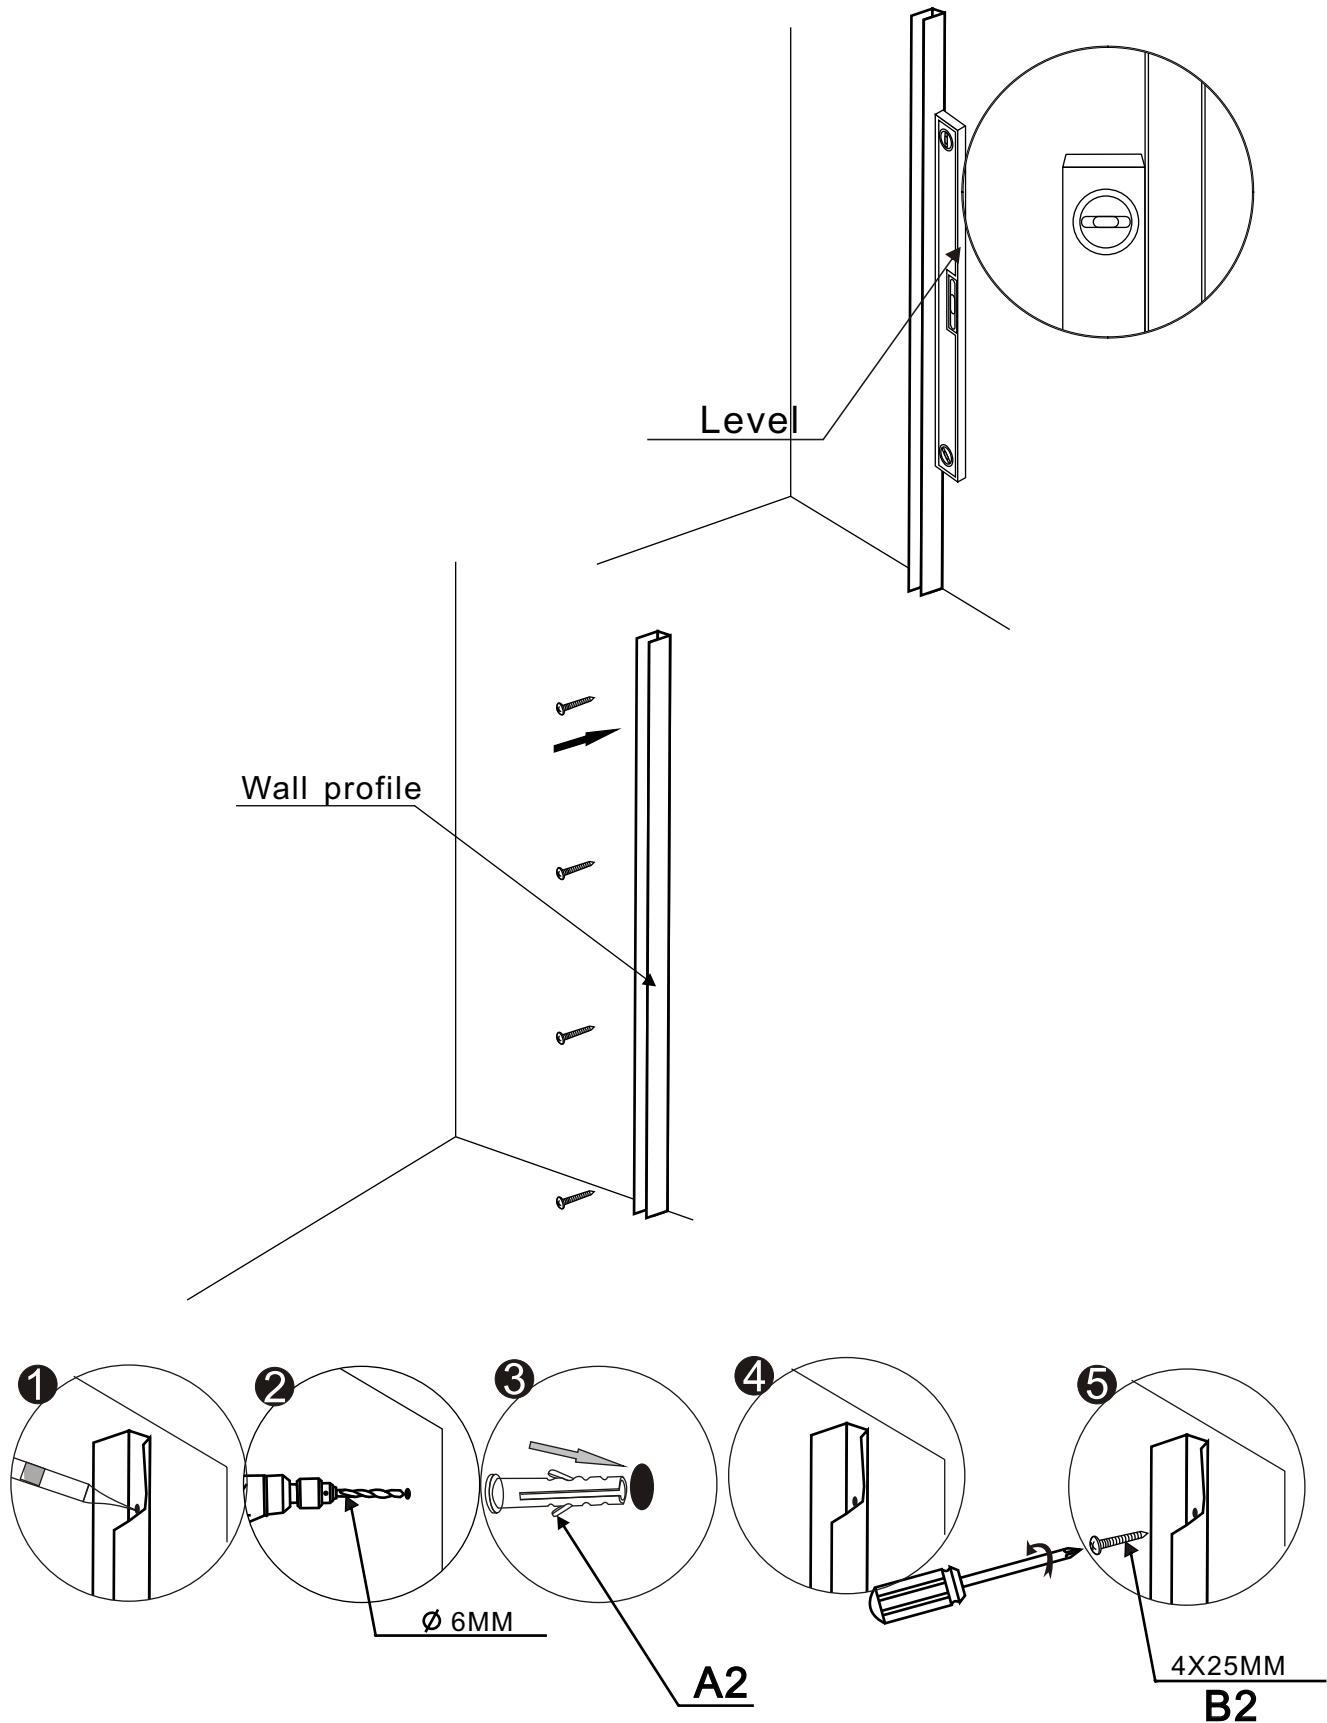


HX-112A

Installation instructions

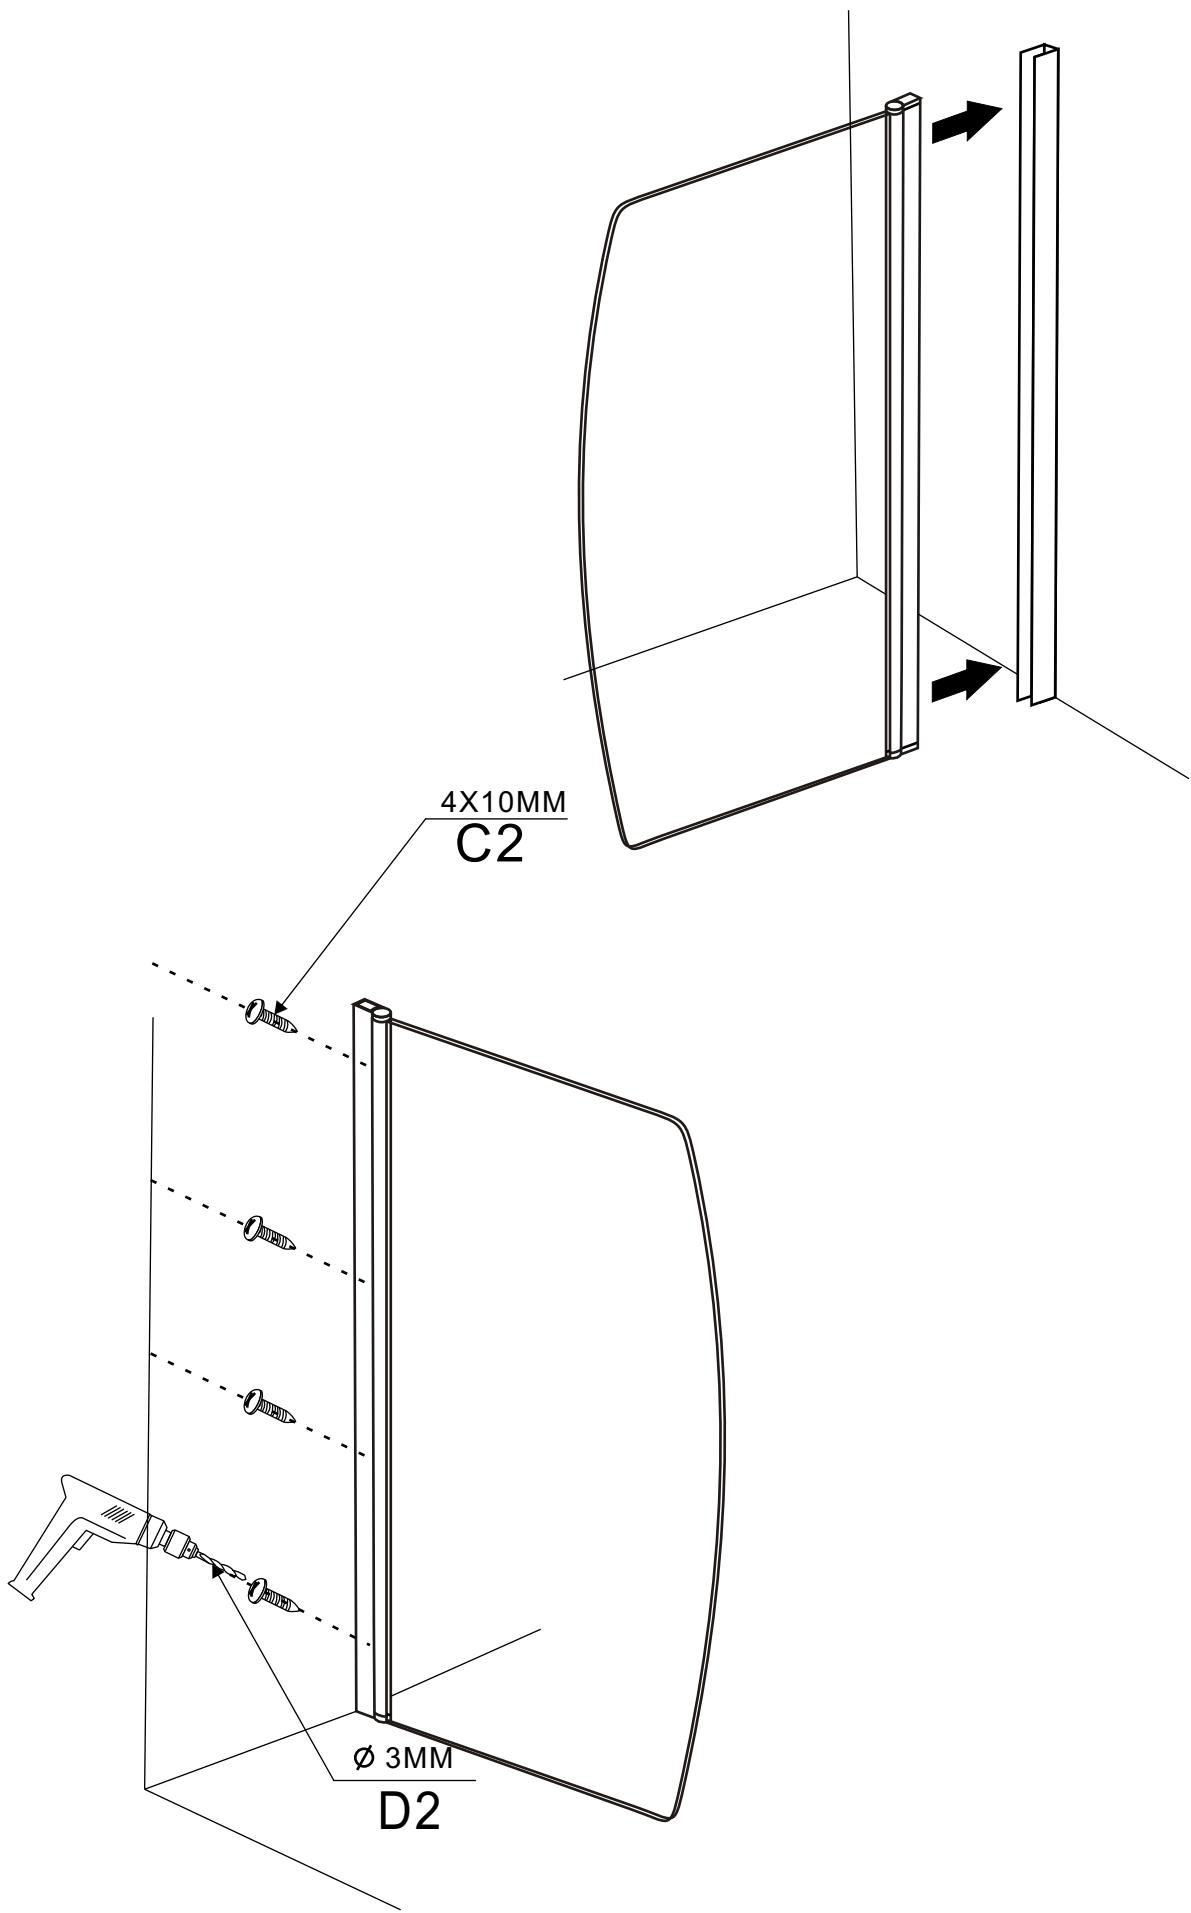


HX-112A

Installation instructions

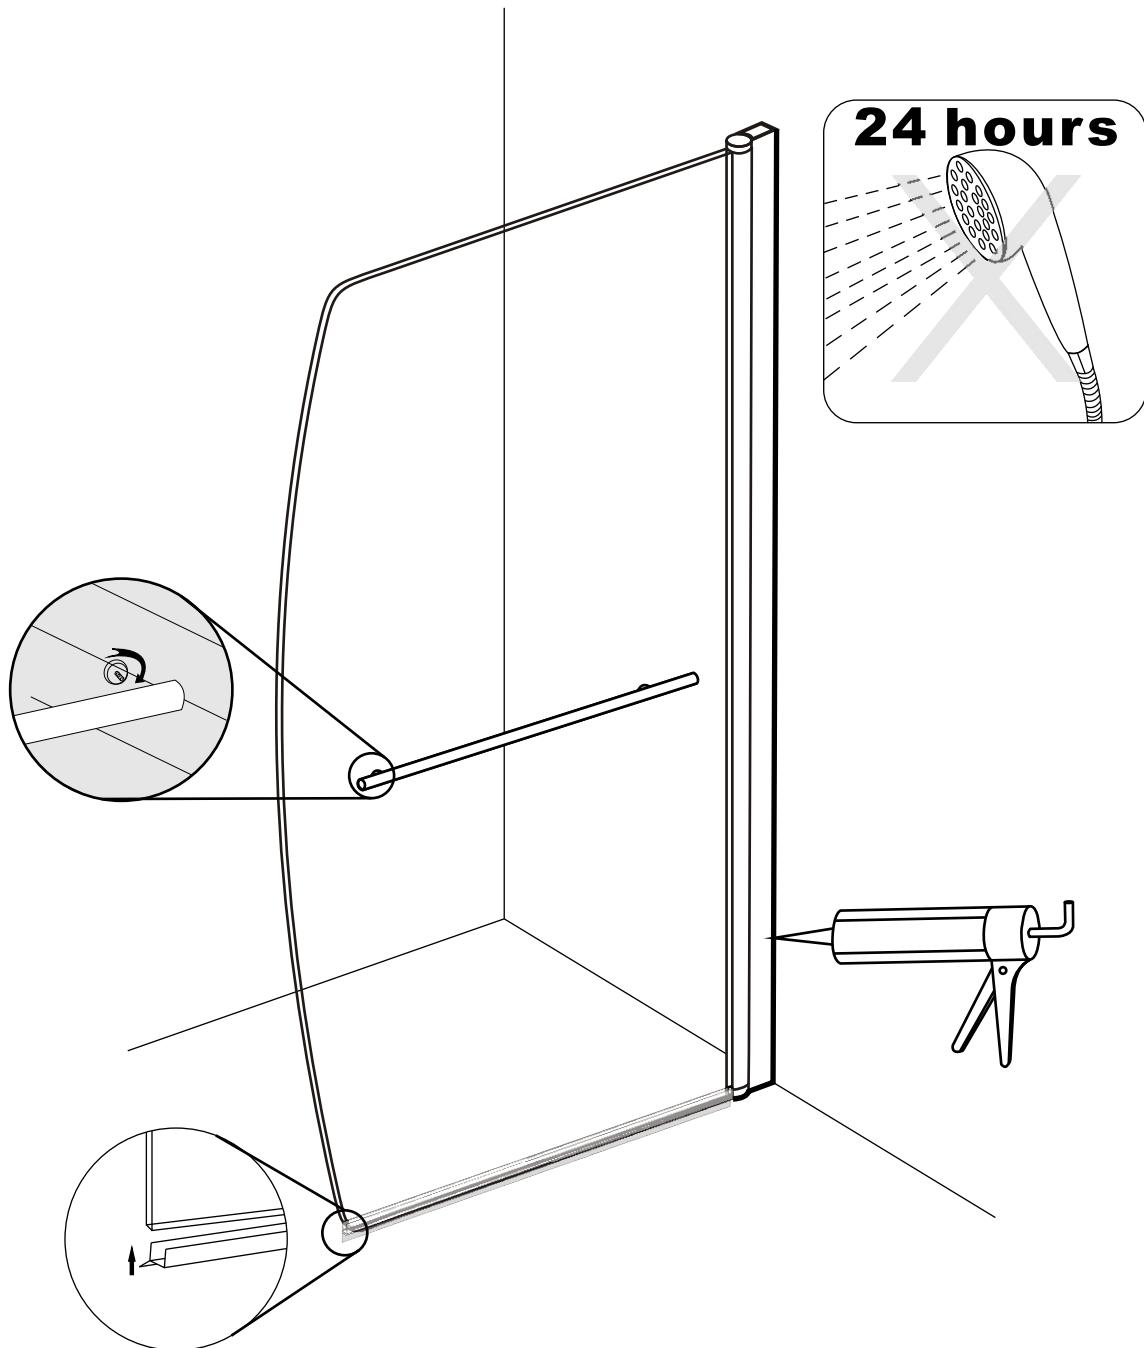

Warning: Don't use the shower enclosure until after at least 24 hours, so that the silica gel can be totally dry.


HX-112C-1
Installation instructions

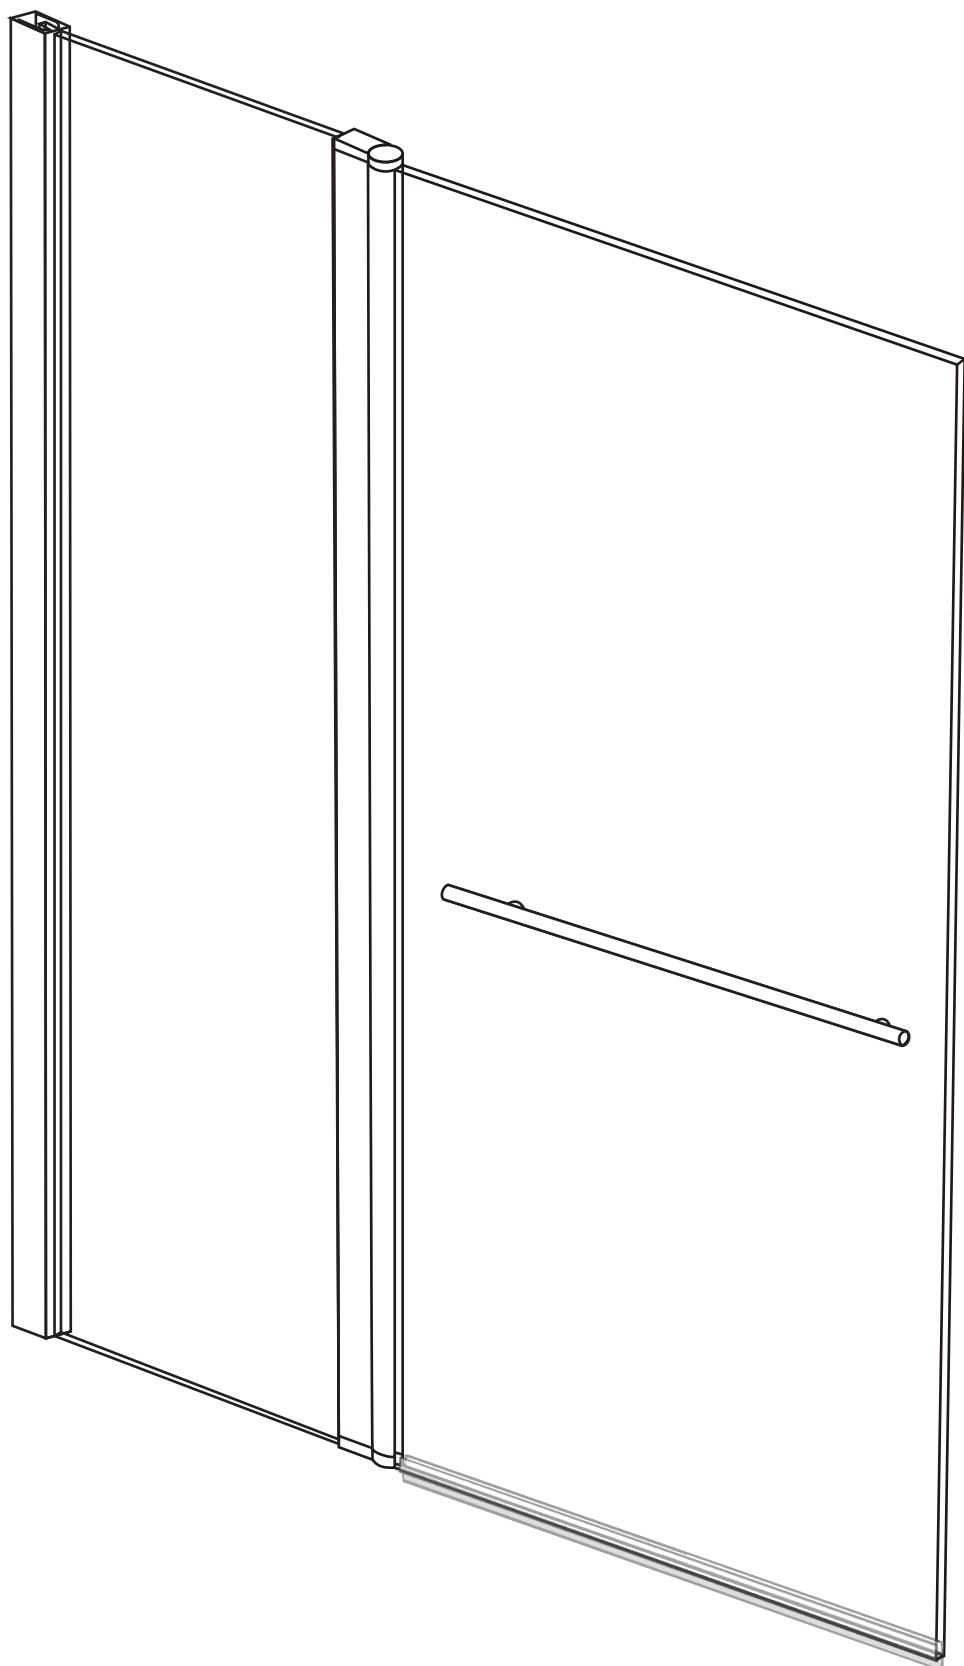

SIZE : 126*140 CM

HX-112C-1

Installation instructions

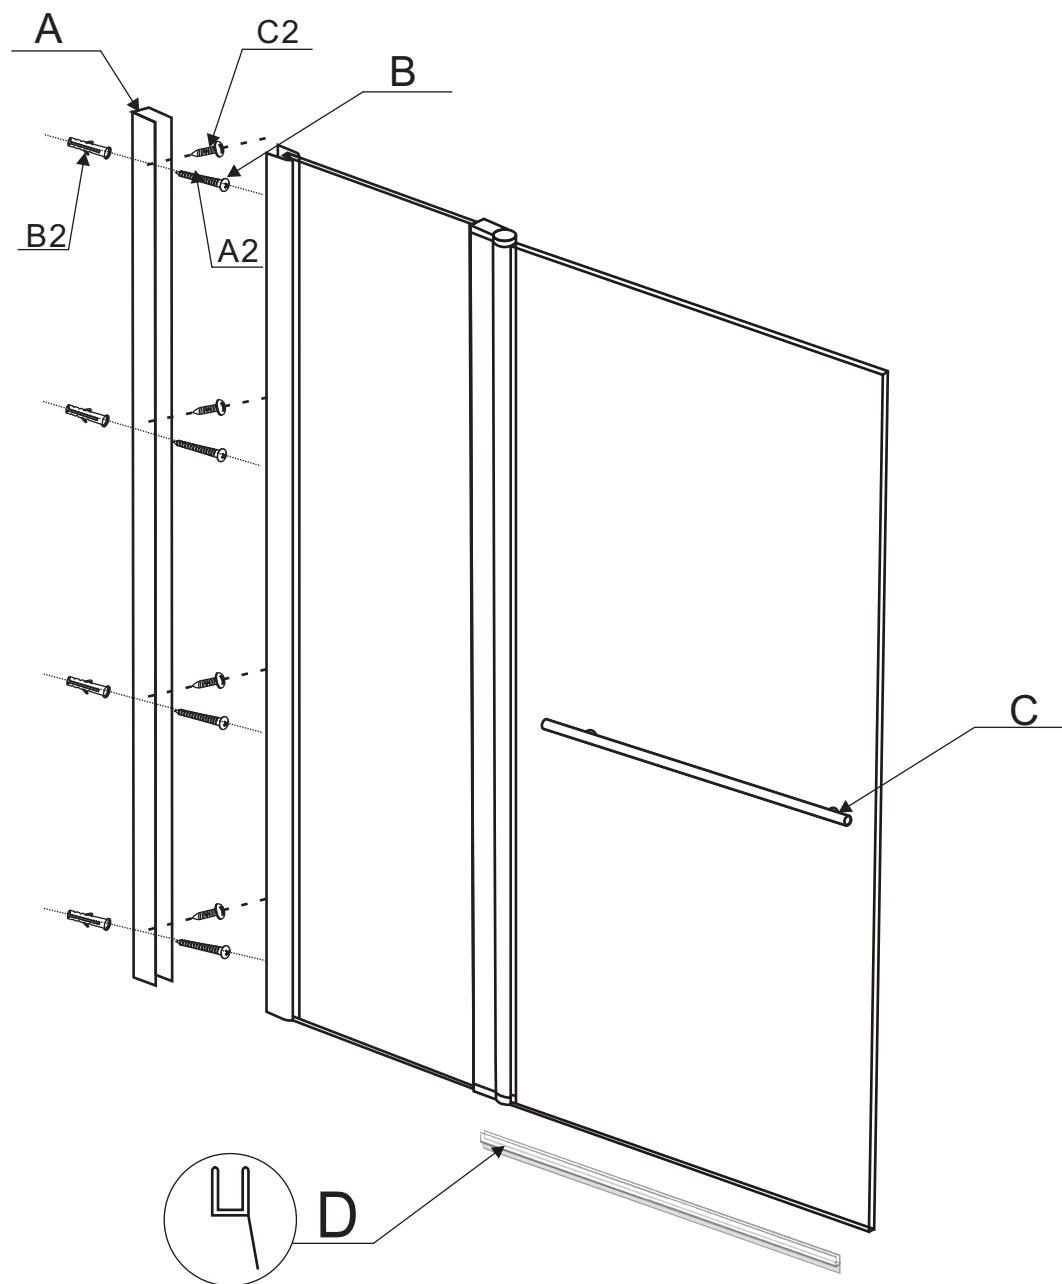

Fixing kit includes

Ref	Description	Qty
A	WALL PROFILE	1
B	SIDE PANEL	1
C	HANDLE	1
D	VERTICAL SEAL FOR FIXED GLASS	1

Ref	Description	Illustration	Qty
A2	green expandable wall plug		4
B2	stainless steel screws: 4*25		4
C2	stainless steel screws: 4*10		4
D2	Drill beat head 3mm		1


HX-112C-1

Installation instructions


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start, make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: although these instructions are comprehensive, we always recommend that a technically competent installer should undertake installation.

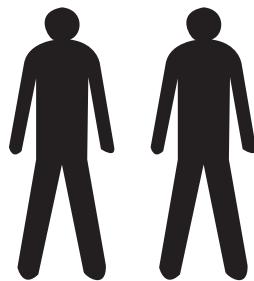


Drill beat head
6mm

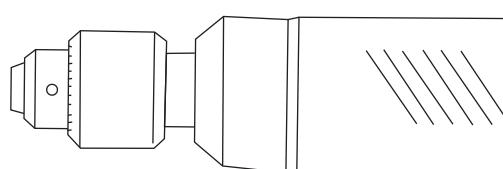


Sanitary Silicone

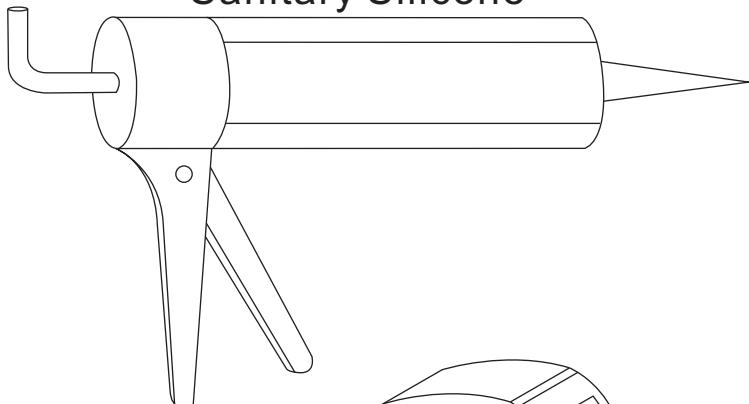


Auger

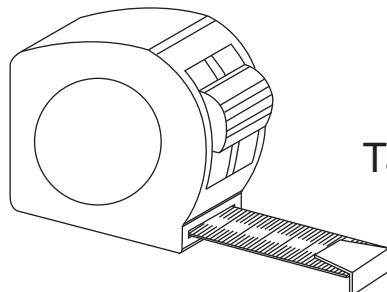


Tape measure



Pencil





Magnetic crosshead screwdriver

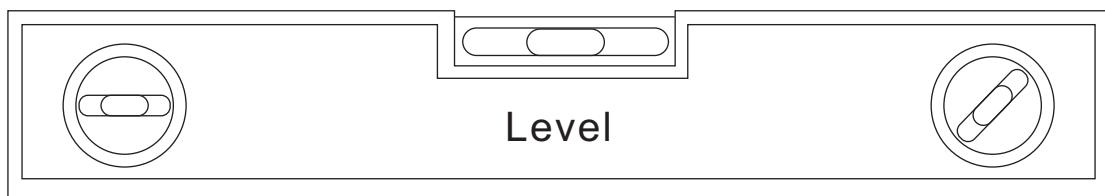


Level

HX-112C-1

Installation instructions

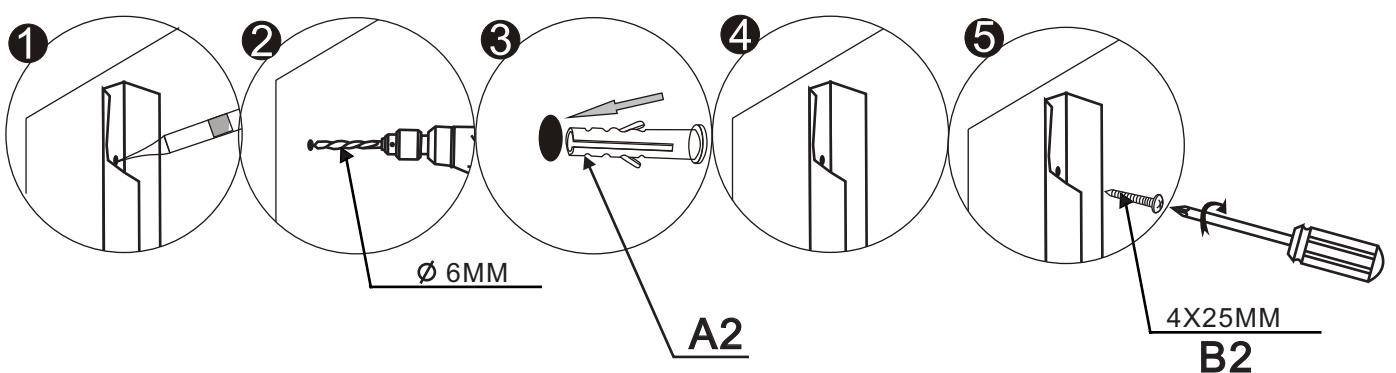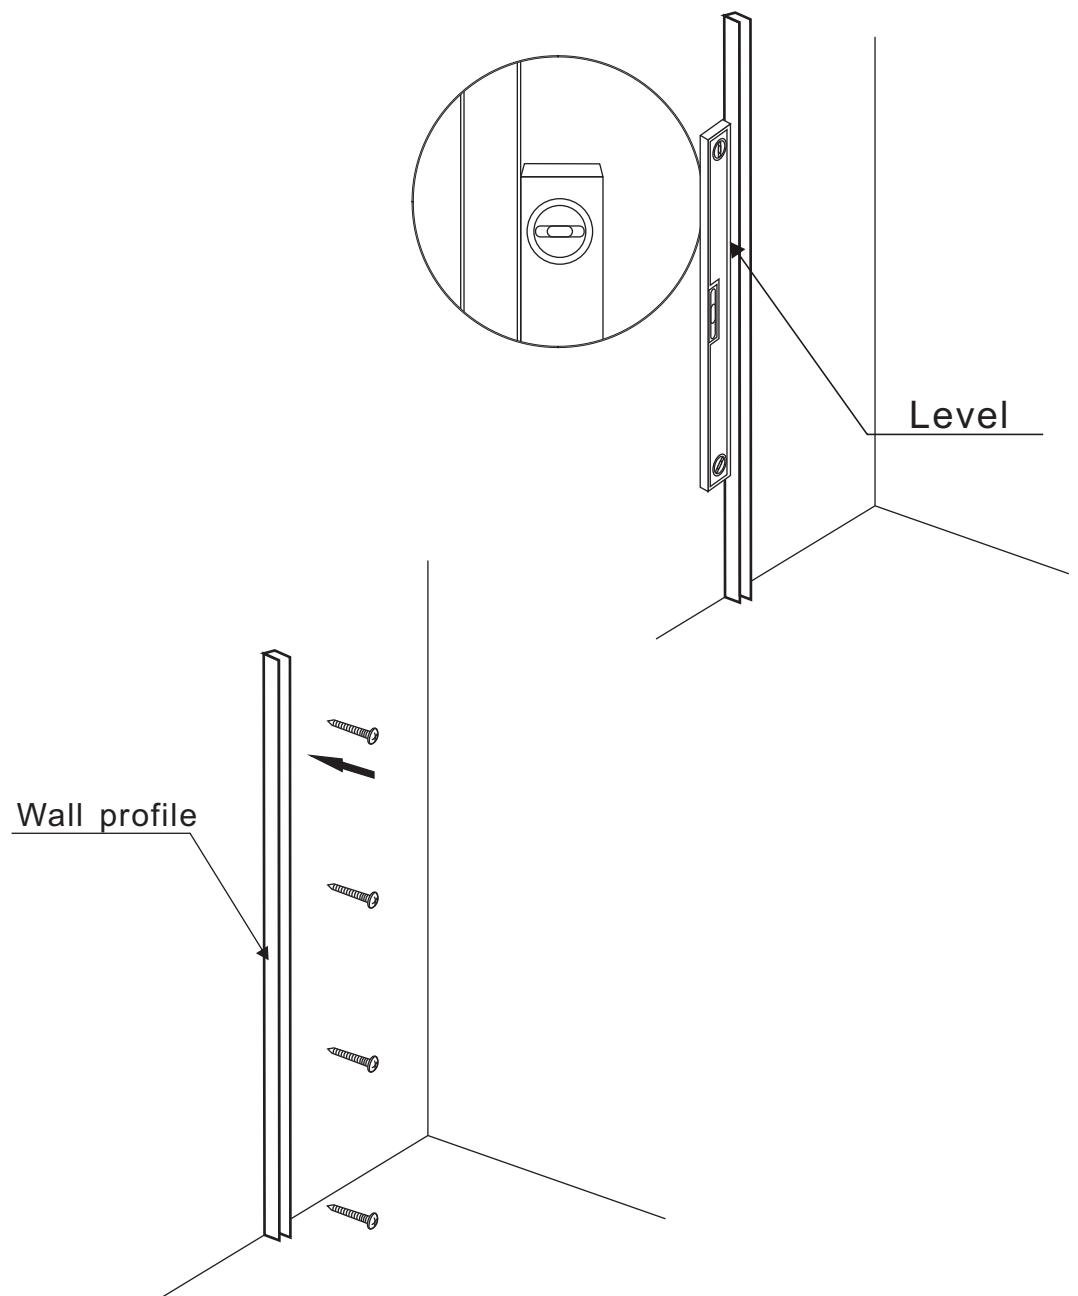


HX-112C-1
Installation instructions

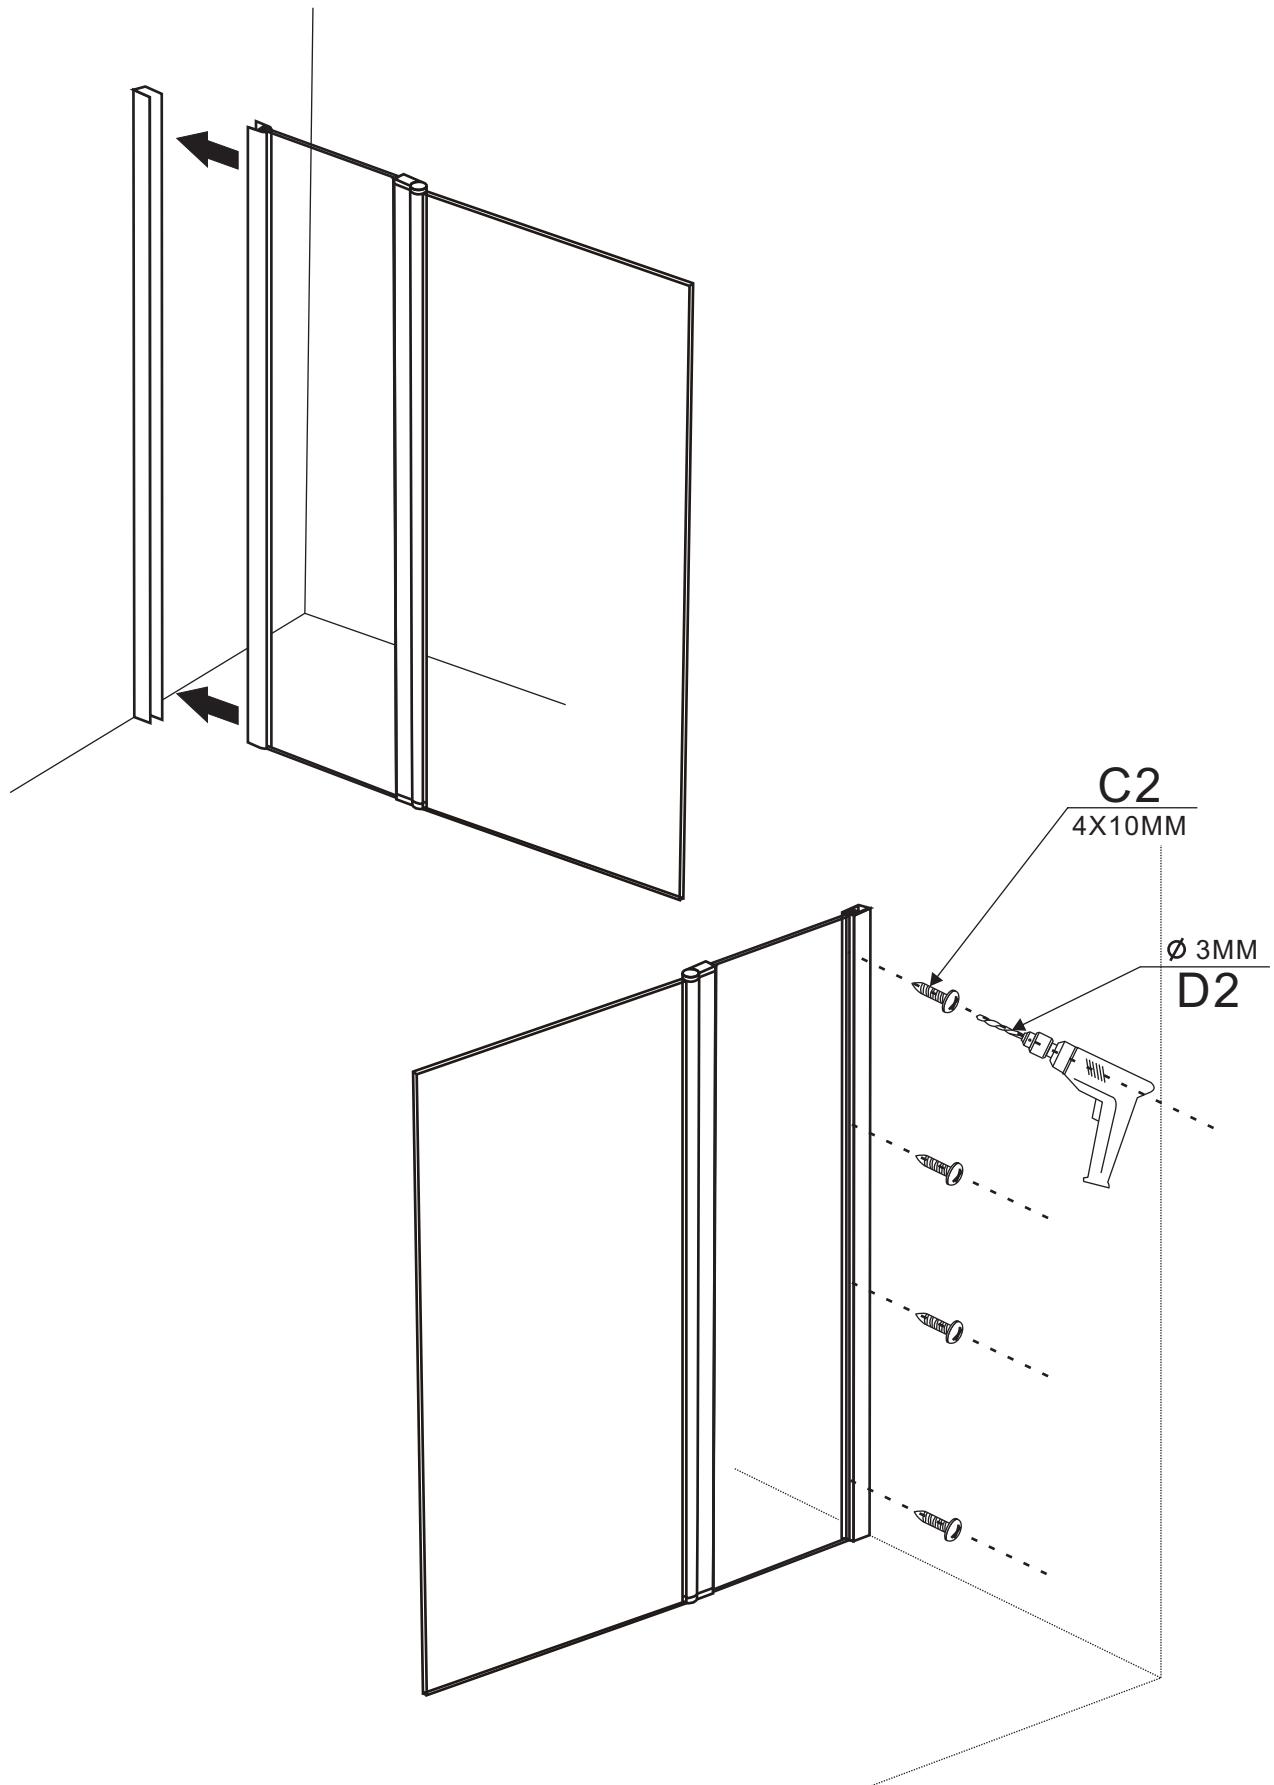

HX-112C-1


Installation instructions

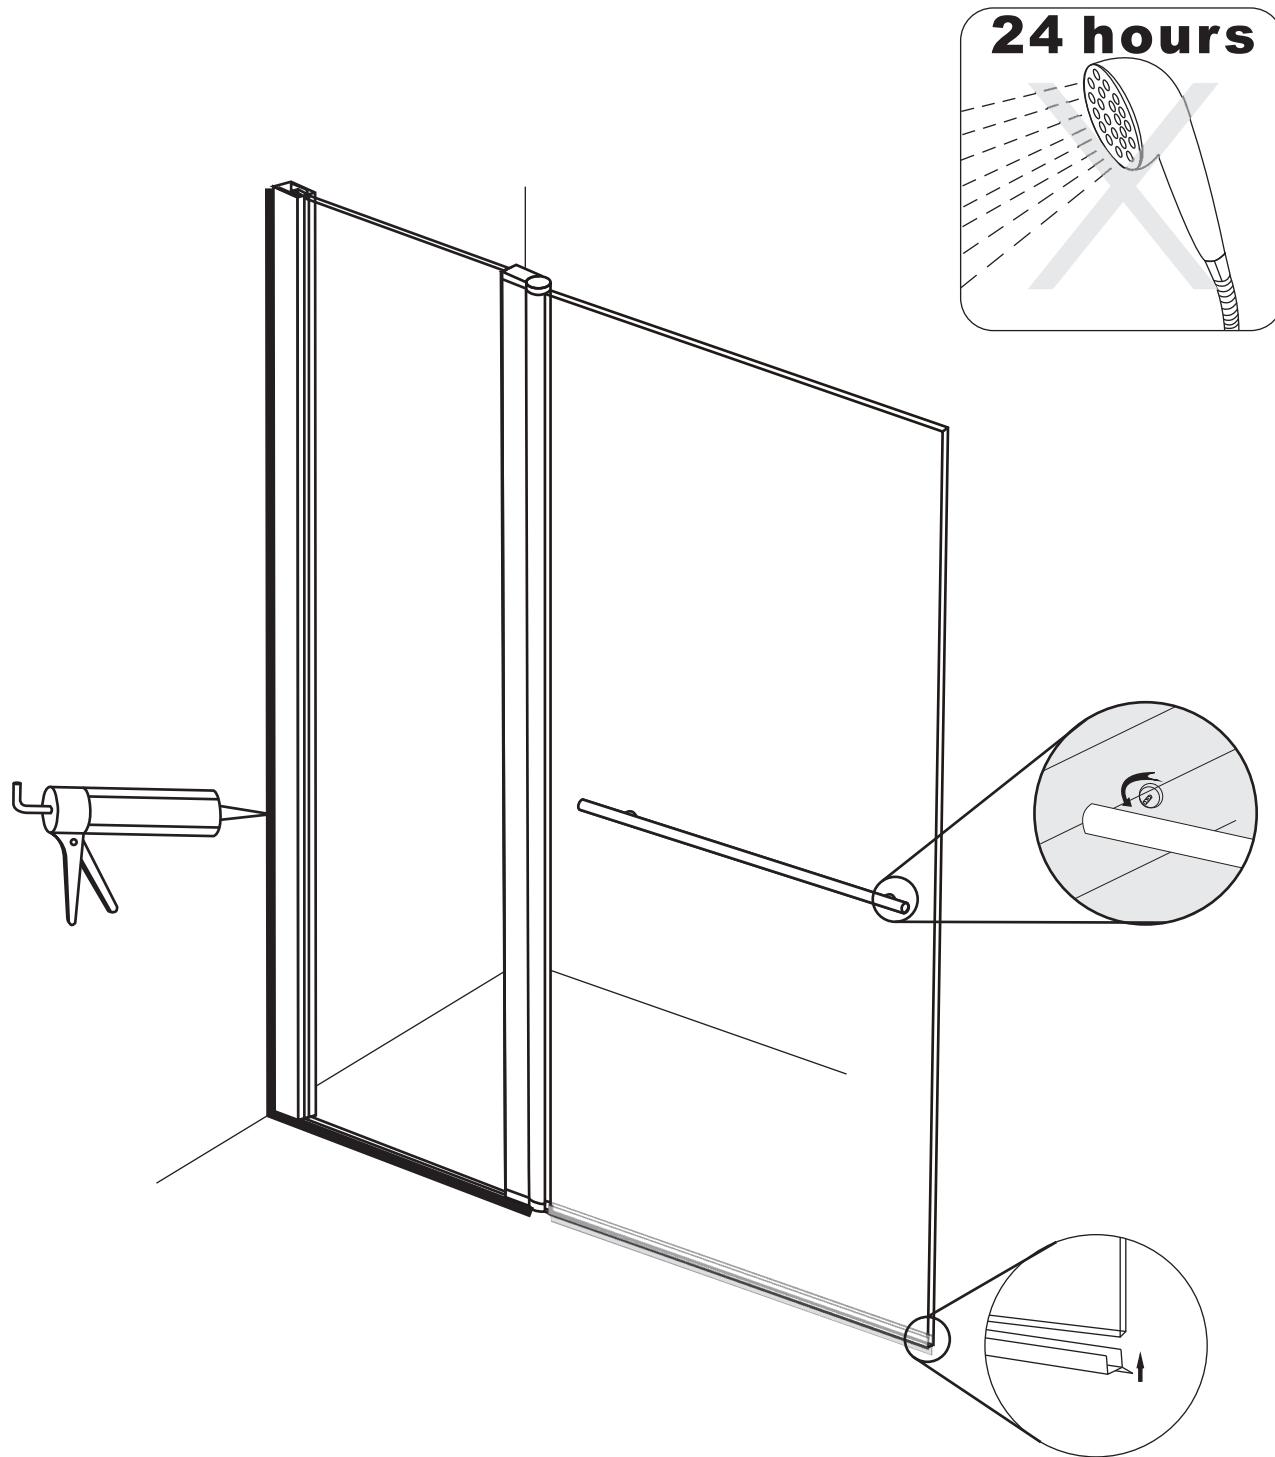


Warning: Don't use the shower enclosure until after at least 24 hours, so that the silica gel can be totally dry.

PF-111

Installation instructions

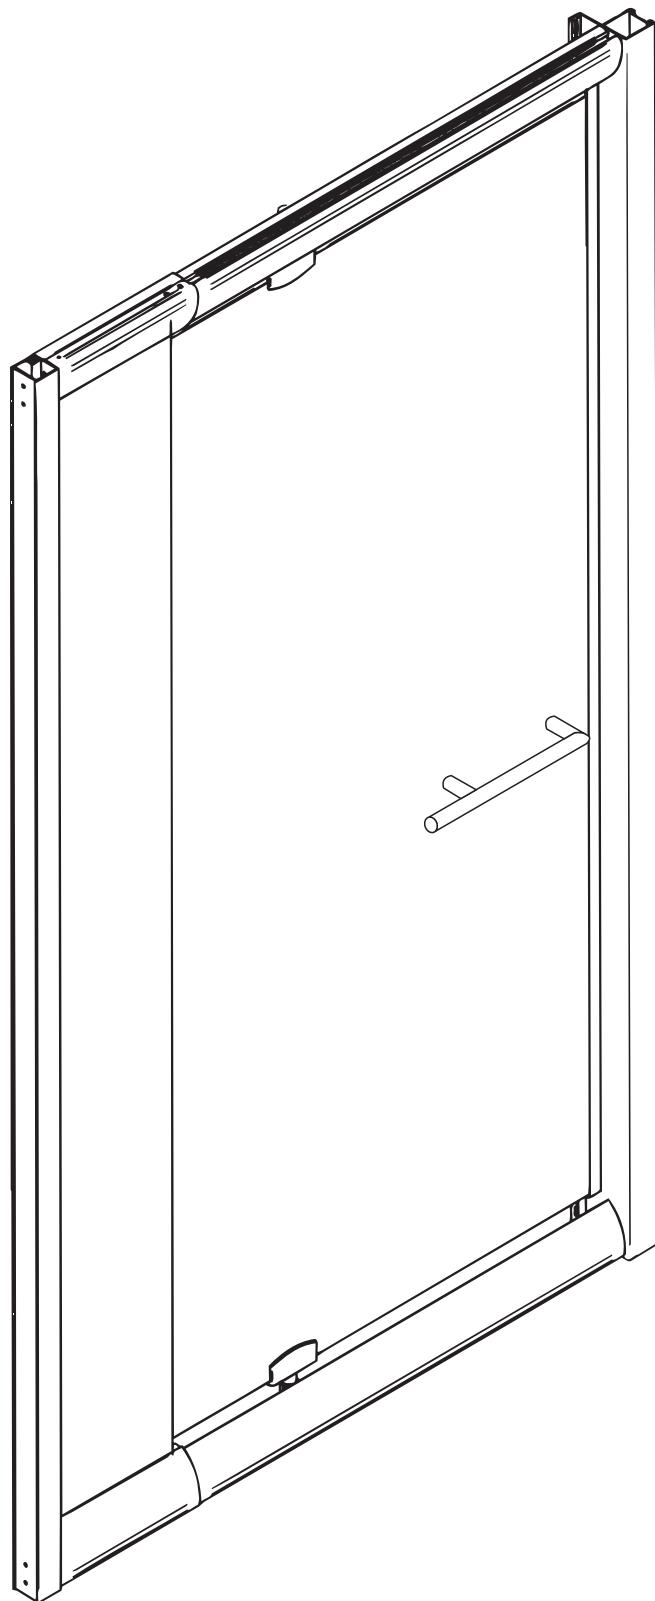

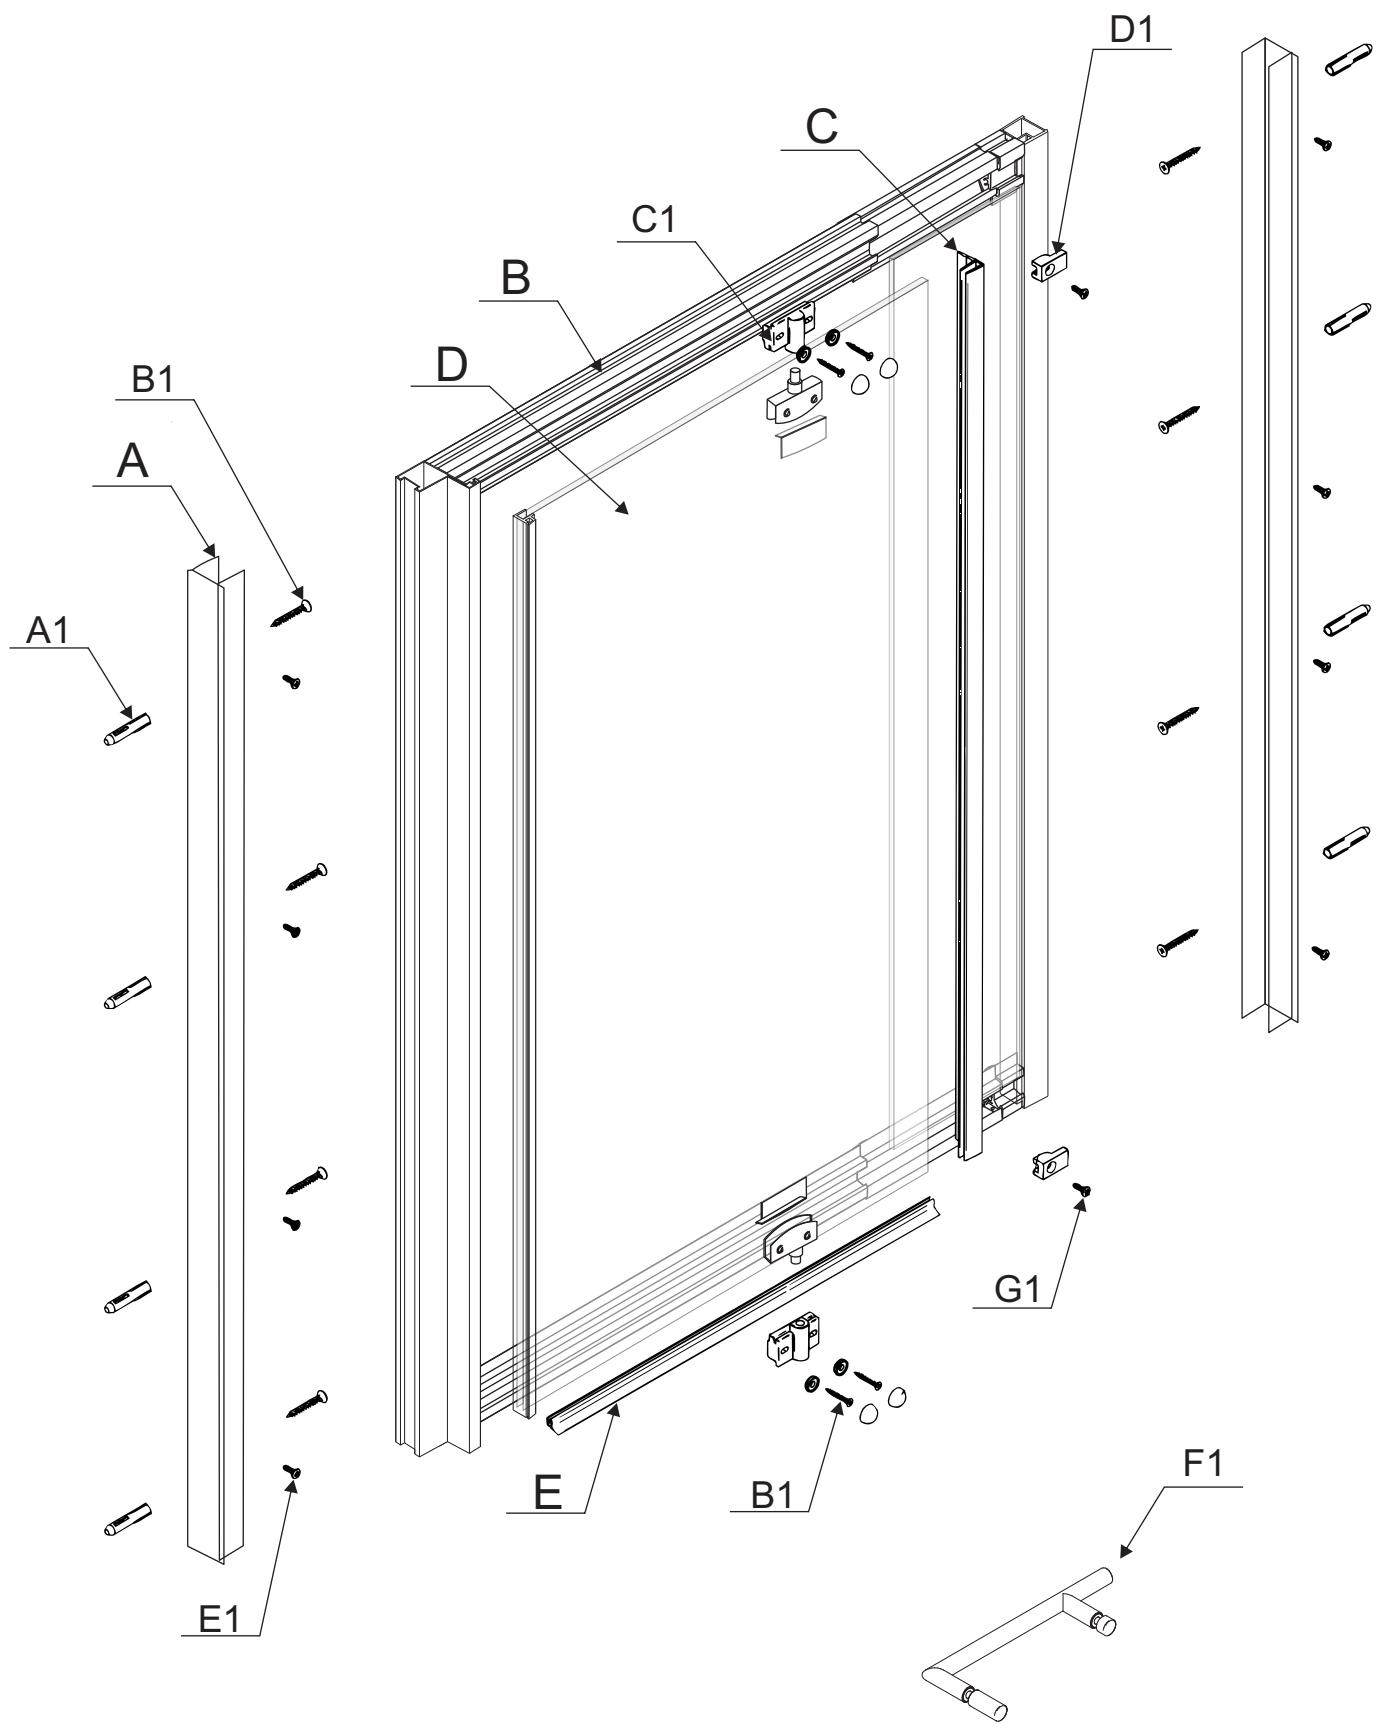

Ref.	Désignation	Qté
A		2
B		1
C		1
D		2
E		1

Ref.	Désignation	Qté
A1		8
B1		12
C1		2
D1		2
E1		8
F1		1
G1		2
H1		1

